

SPARE PARTS LIST

Version 1.1

ALBA 100 V 50/60 Hz | 110-127 V 50/60 Hz | 220-240 V 50/60 Hz

ALBA



INFORMATION




SERVICE MOVIES



WIRING DIAGRAMM
100-120 V 50/60 Hz



WIRING DIAGRAMM
220-240 V 50/60 Hz

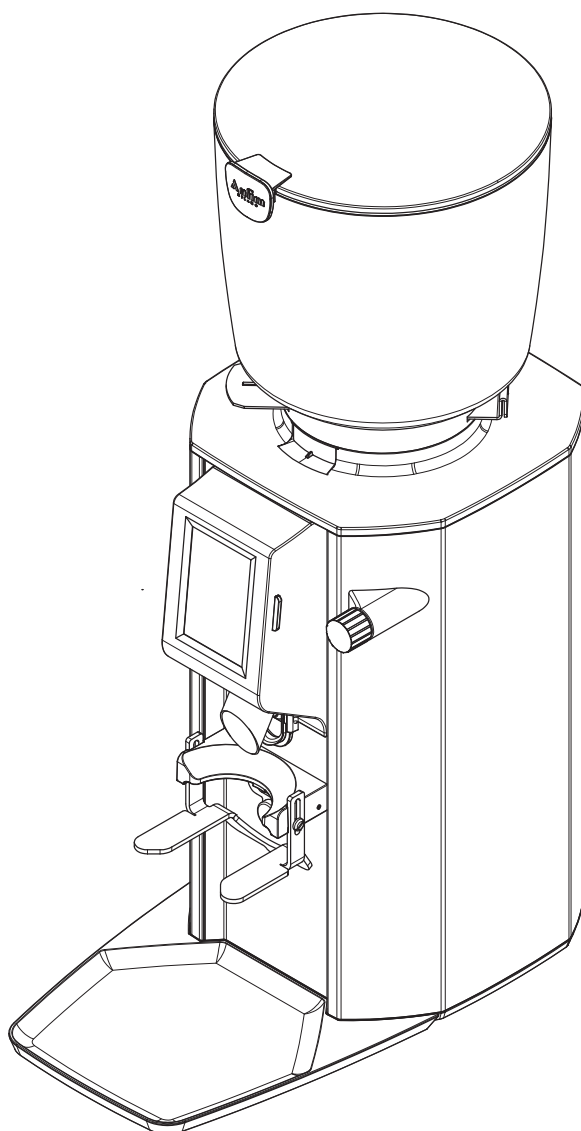

Please indicate the article- and serial number of your grinder when ordering.

WARNING:

This spare parts list is meant to support qualified technicians and trained staff, only. Only parts that comply with the original appliance specification may be used for repairs. Mistakes in opening or assembling the grinder may cause injuries and/or damages and malfunctions. **If the grinder gets opened by an unauthorized person, the manufacturer's liability and warranty expire.**

valid from
2024-01-01

Anfim
M I L A N O




Subject to change without prior notice.

www.anfim-milano.com

SPARE PARTS LIST

Version 1.1


ALBA 100 V 50/60 Hz | 110-127 V 50/60 Hz | 220-240 V 50/60 Hz

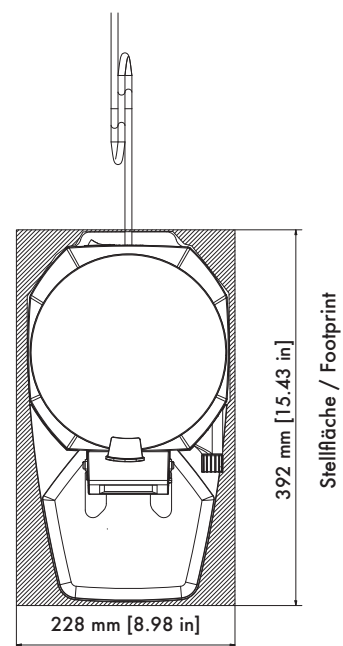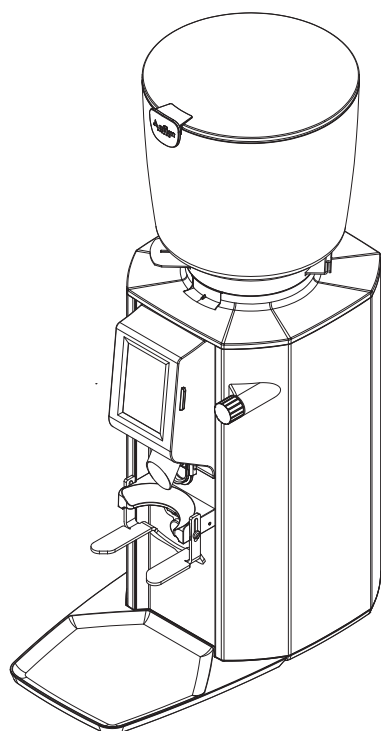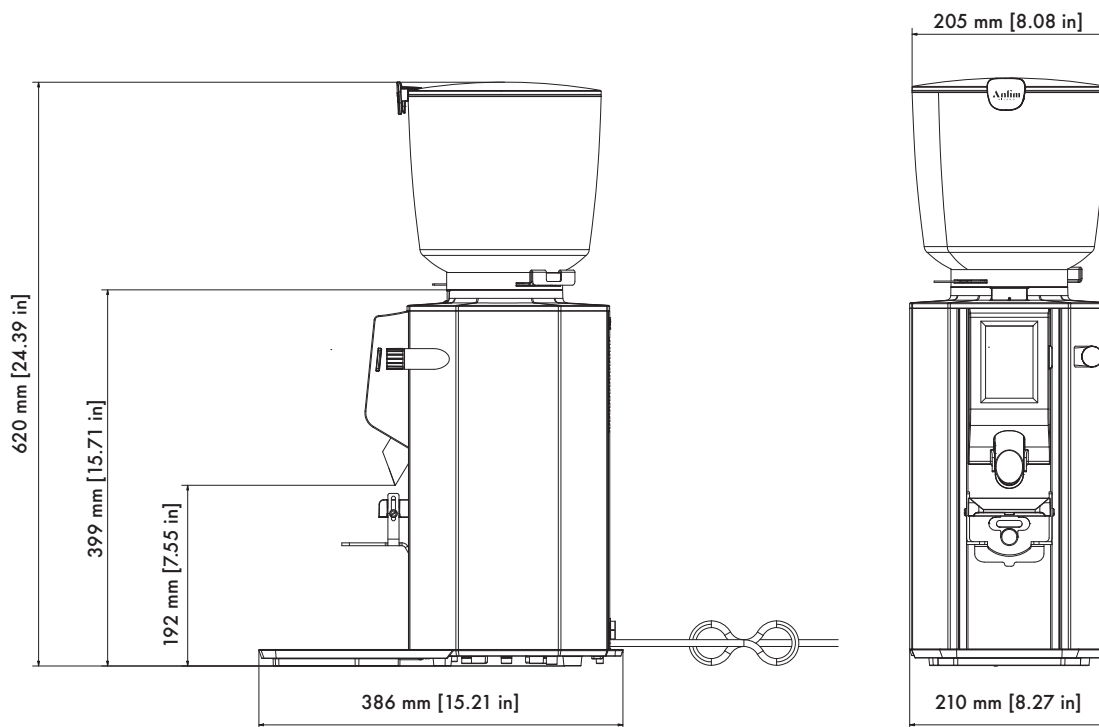

SPARE PARTS LIST

Version 1.1


ALBA 100 V 50/60 Hz | 110-127 V 50/60 Hz | 220-240 V 50/60 Hz

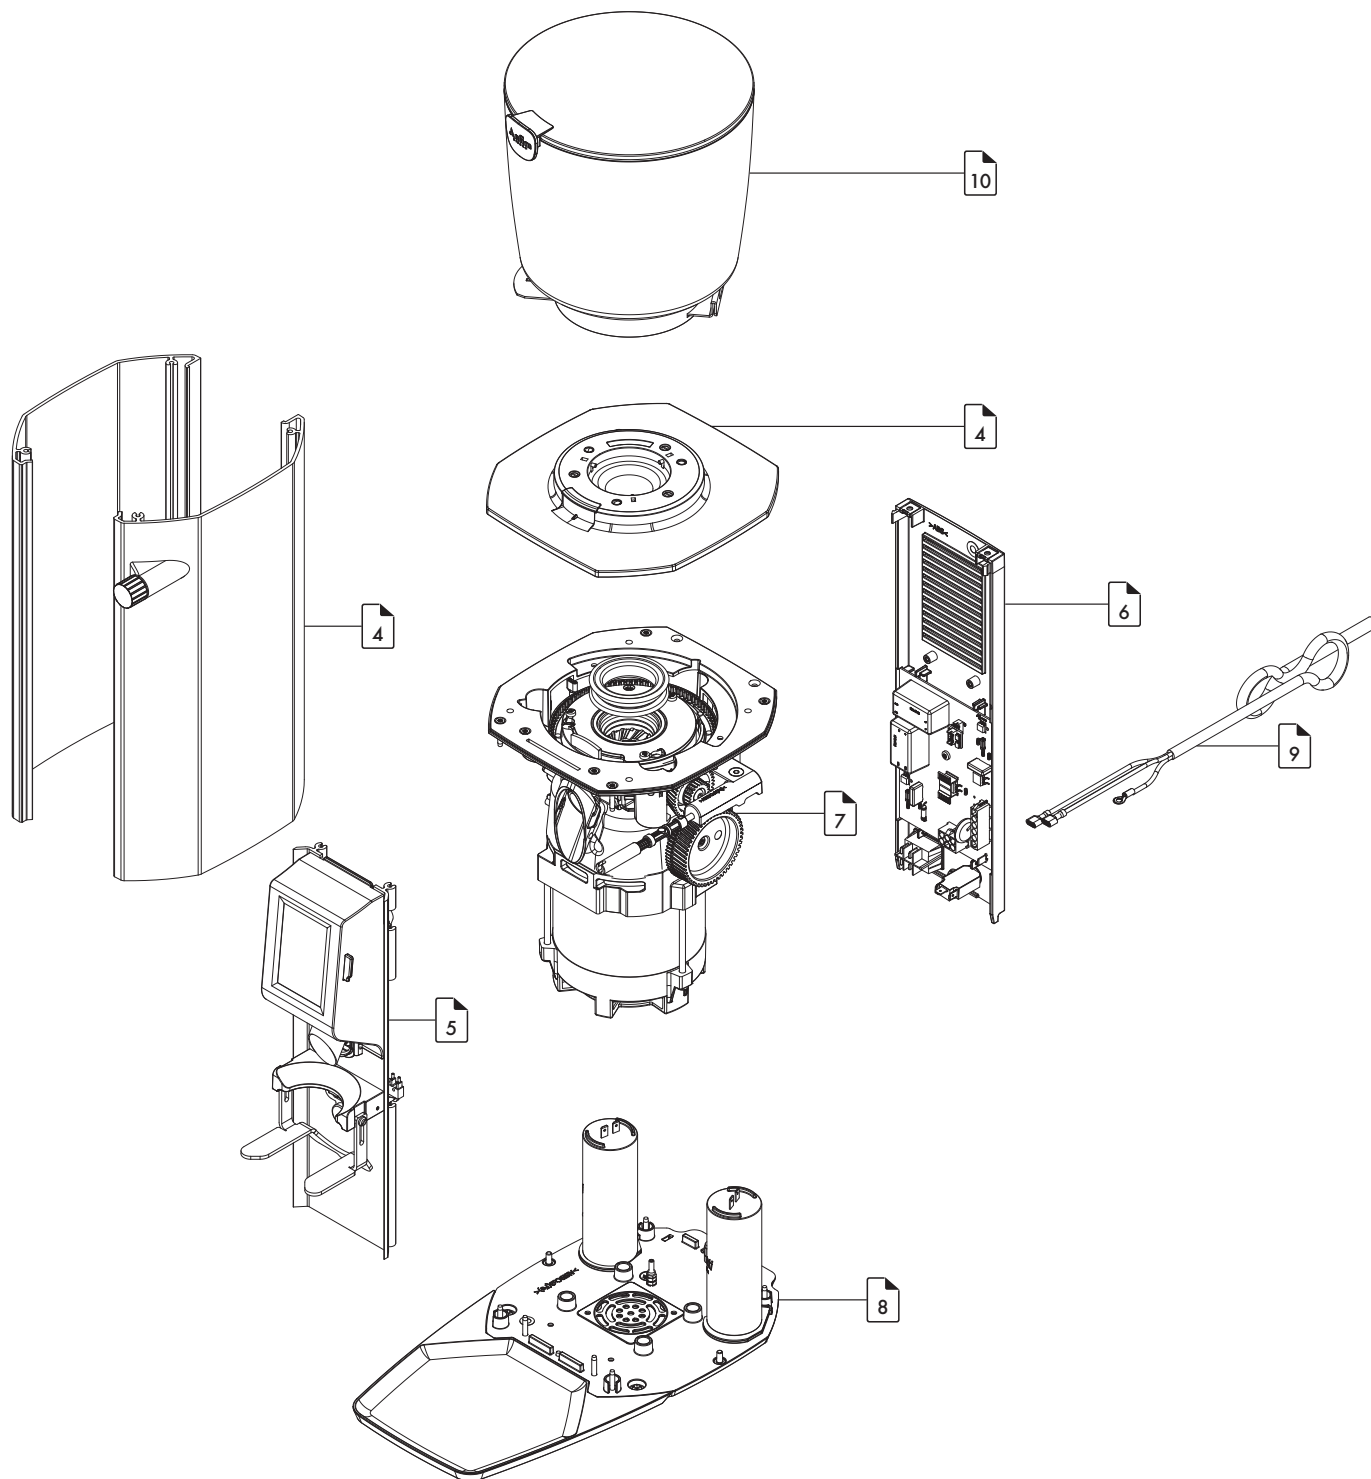

SPARE PARTS LIST

Version 1.1

ALBA 100 V 50/60 Hz | 110-127 V 50/60 Hz | 220-240 V 50/60 Hz

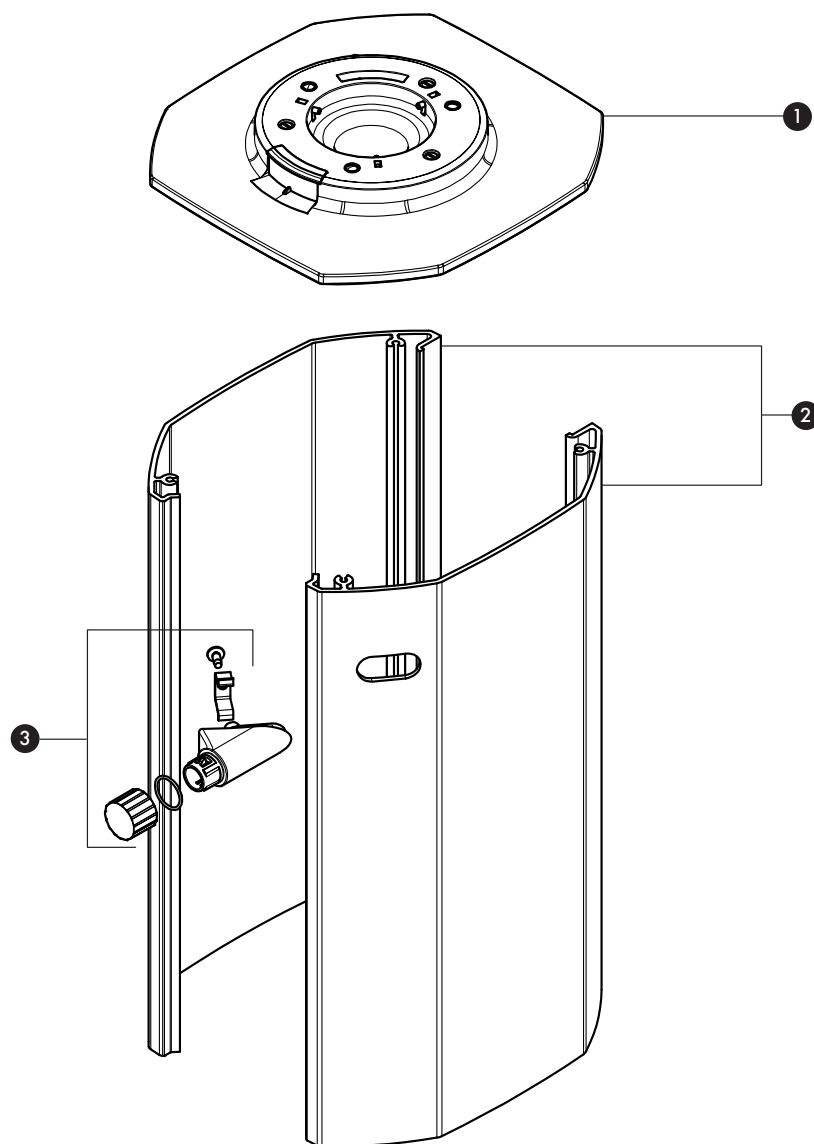

MATERIAL	POS.	DESCRIPTION
705831	1	Grinder top cover
	2	Housing side panels
705838		↳ black
705839		↳ white
705069	3	Grind size adjuster

SPARE PARTS LIST

Version 1.1


ALBA 100 V 50/60 Hz | 110-127 V 50/60 Hz | 220-240 V 50/60 Hz



WIRING DIAGRAM
100-120 V 50/60 Hz



WIRING DIAGRAM
220-240 V 50/60 Hz

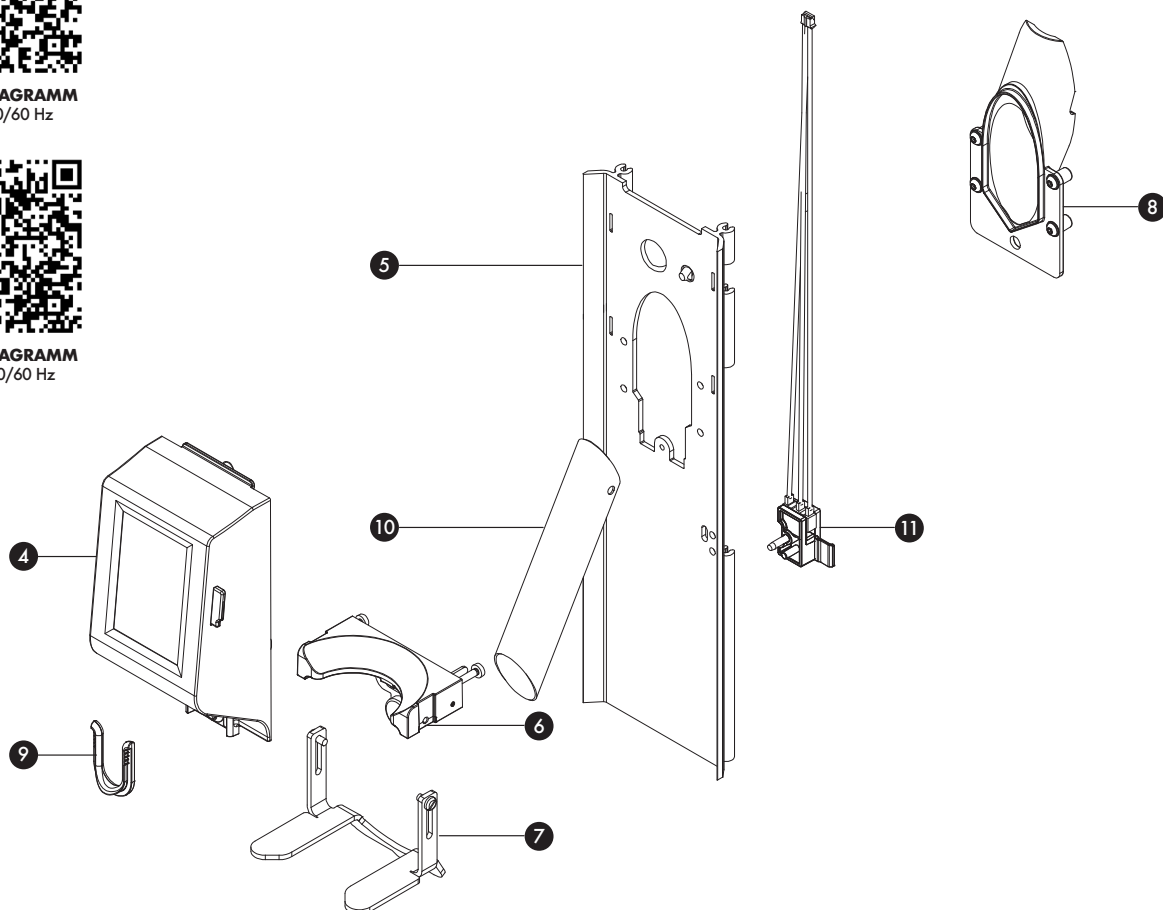

CAUTION!

Authorized technicians only. All operations must be carried out by electric trained specialist, authorized by the plant manufacturer only.



Injury of the electronic components in the device by electrostatic discharge possible.

- During the technical service, take care of the ESD-protection.
- Unplug the power plug from the power socket.
- Place the grinder on a level and stable surface, so that it cannot fall off.
- Do not leave the grinder unattended during the technical service.

MATERIAL	POS.	DESCRIPTION
705830	4	Display control unit
705834	5	Housing front panel black
705056	6	Portafilter support
700708	7	Portafilter holder
705843	8	Spout pipe guidance
705060	9	Spout angle adjustment lever
705833	10	Spout pipe
705057	11	On-demand switch

SPARE PARTS LIST

Version 1.1


ALBA 100 V 50/60 Hz | 110-127 V 50/60 Hz | 220-240 V 50/60 Hz



WIRING DIAGRAMM
100-120 V 50/60 Hz



WIRING DIAGRAMM
220-240 V 50/60 Hz

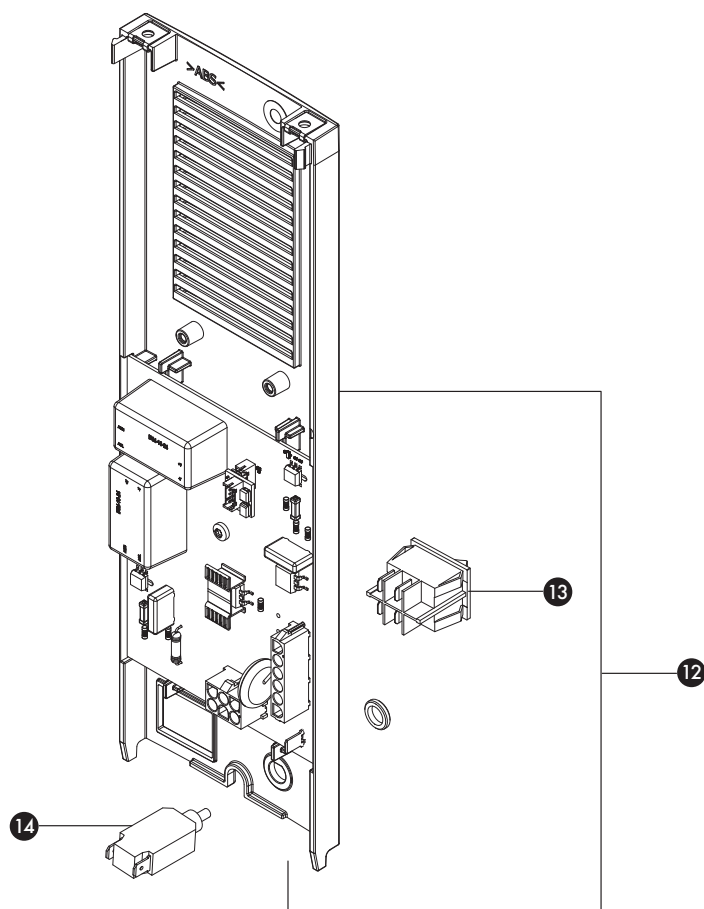

CAUTION!

Authorized technicians only. All operations must be carried out by electric trained specialist, authorized by the plant manufacturer only.



Injury of the electronic components in the device by electrostatic discharge possible.


- During the technical service, take care of the ESD-protection.
- Unplug the power plug from the power socket.
- Place the grinder on a level and stable surface, so that it cannot fall off.
- Do not leave the grinder unattended during the technical service.

MATERIAL	POS.	DESCRIPTION
705837	12	Back panel with powerboard 100-240 V
702979	13	Power switch 100-240 V
	14	Circuit breaker
702383		↳ 100 V
308383		↳ 110-127 V
309551		↳ 220-240 V

SPARE PARTS LIST

Version 1.1

ALBA 100 V 50/60 Hz | 110-127 V 50/60 Hz | 220-240 V 50/60 Hz

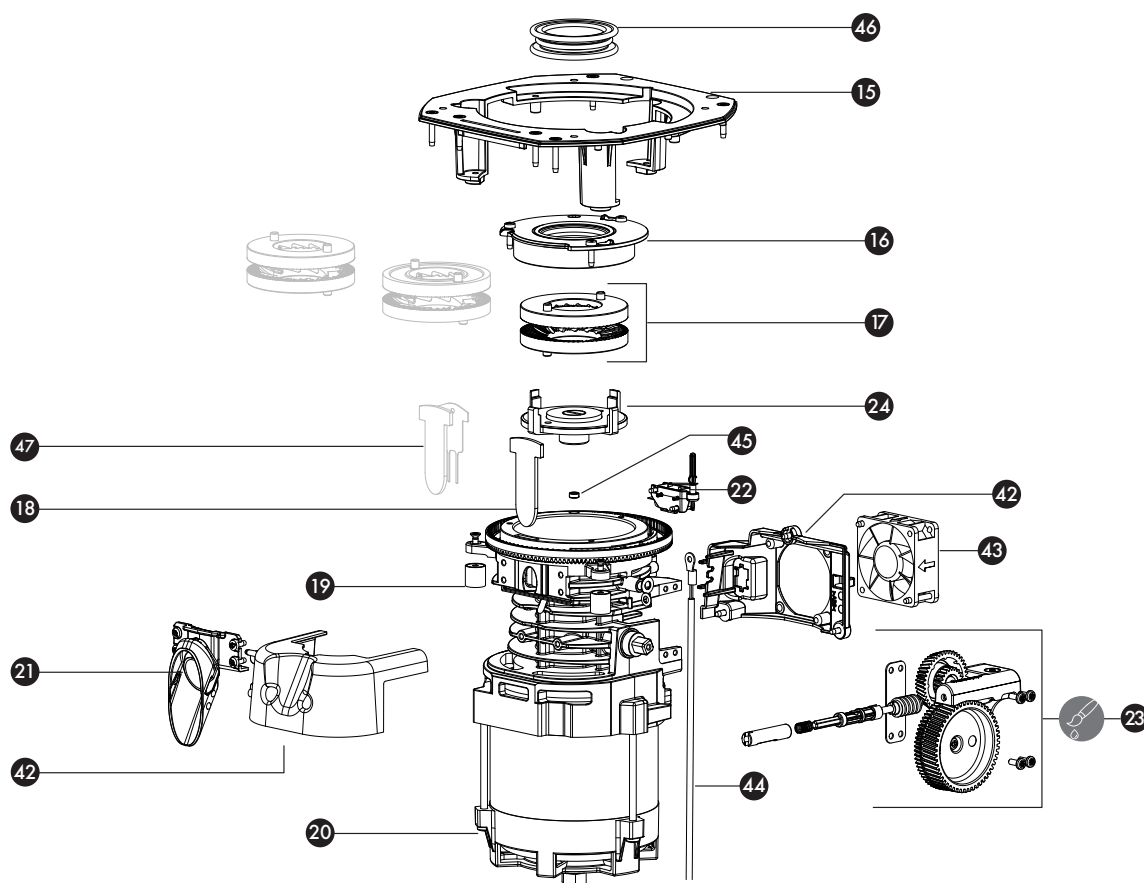

MATERIAL	POS.	DESCRIPTION
706425	46	Seal
705841	15	Intermediate plate
702566	16	Fixed burr carrier
	17	Grinding burrs 80 mm
705769		↳ Special steel (standard)
701619		↳ Special steel (higher grind speed)
105780		↳ Premium cast steel (higher grind speed & lifetime)
705185	24	Rotary burr carrier
703092	18	Silicone flapper
701856	47	High-volume flapper kit
704047	19	Shock absorbers (3x)
	20	Motor drive unit
703095		↳ 100 V 50/60 Hz
703094		↳ 110-127 V 60 Hz
703093		↳ 200-240 V 50/60 Hz
703204	21	Spout grinding chamber
700712	22	Interlock switch
705840	23	Grind size transmission
703100	42	Air flow guidance
703099	43	Fan
705848	44	Temperature sensor
703205	45	Seal for interlock pin (10x)

SPARE PARTS LIST

Version 1.1


ALBA 100 V 50/60 Hz | 110-127 V 50/60 Hz | 220-240 V 50/60 Hz



WIRING DIAGRAMM
100-120 V 50/60 Hz



WIRING DIAGRAMM
220-240 V 50/60 Hz

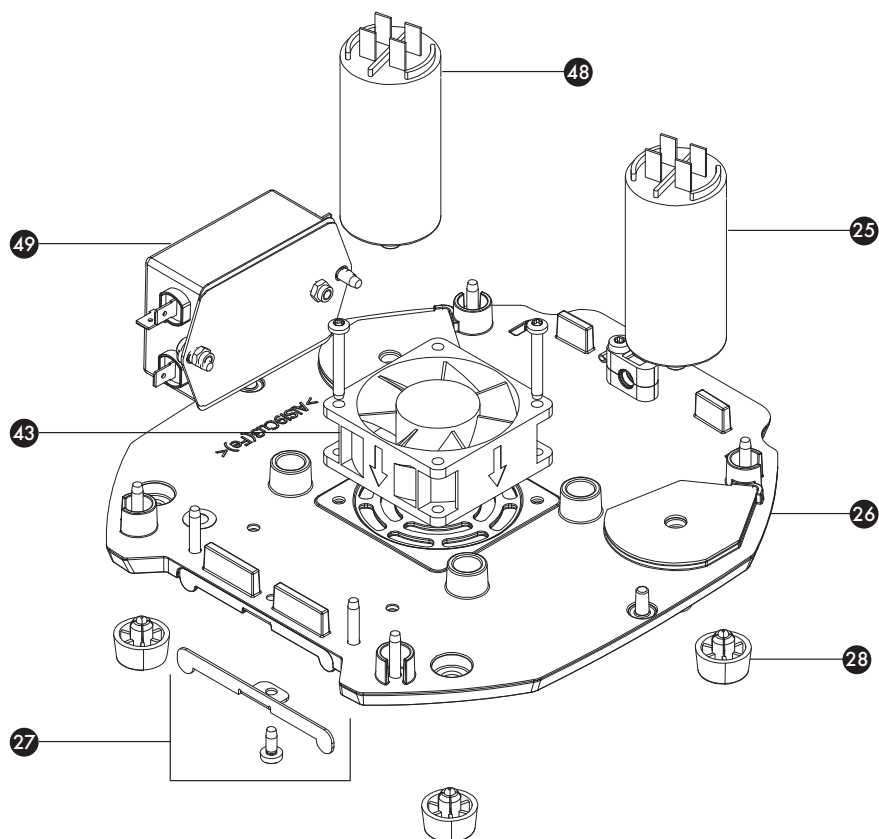

CAUTION!

Authorized technicians only. All operations must be carried out by electric trained specialist, authorized by the plant manufacturer only.



Injury of the electronic components in the device by electrostatic discharge possible.

- During the technical service, take care of the ESD-protection.
- Unplug the power plug from the power socket.
- Place the grinder on a level and stable surface, so that it cannot fall off.
- Do not leave the grinder unattended during the technical service.


MATERIAL	POS.	DESCRIPTION
100-127 V		
702579	25	↳ Running capacitor
702579	48	↳ Starting capacitor
704264	49	↳ EMC filter
220-240 V		
702577	25	↳ Running capacitor
702577	48	↳ Starting capacitor
702578	49	↳ EMC Filter
703099	43	Fan
705835	26	Housing base plate
705836	27	Housing base plate small part set
700727	28	Grinder feet 4x

SPARE PARTS LIST

Version 1.1

ALBA 100 V 50/60 Hz | 110-127 V 50/60 Hz | 220-240 V 50/60 Hz

Power cord

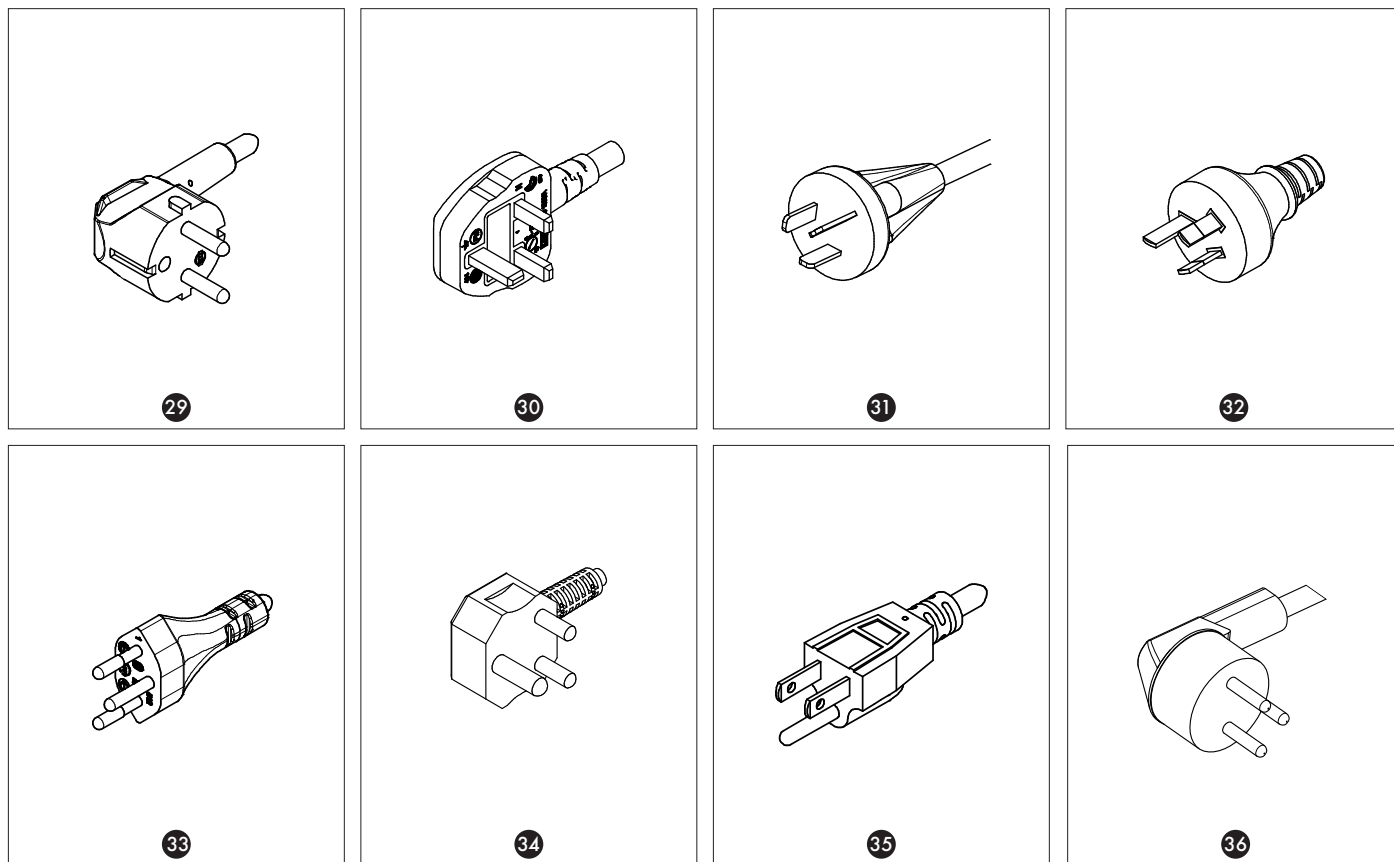

MATERIAL	POS.	DESCRIPTION
703342	29	Power cord Europe, Indonesia
703344	29	Power cord Korea
703343	29	Power cord Belarus
703346	30	Power cord Great Britain, United Arab Emirates, Hong Kong, Saudi Arabia
703350	31	Power cord China
703349	31	Power cord Argentina
703348	32	Power cord Australia
703351	33	Power cord Switzerland
703353	33	Power cord Brazil
703352	34	Power cord South Africa
703339	35	Power cord USA, Canada, Mexico, Panama
703341	35	Power cord Japan
703340	35	Power cord Taiwan
703347	36	Power cord Israel

SPARE PARTS LIST

Version 1.1

ALBA 100 V 50/60 Hz | 110-127 V 50/60 Hz | 220-240 V 50/60 Hz

Accessories



MATERIAL	POS.	DESCRIPTION
705055	37	Bean hopper 2.0 kg
705832	38	Drip tray
101853	39	Grinder cleaner GRINDZ
105168	40	Special grease NSF/H1 50 g
703290	41	Tool for burr removal
703092	18	Silicone flapper
704024	47	High-volume flapper kit
705833	10	Spout pipe
	17	Grinding burrs 80 mm
705769		↳ Special steel (standard)
701619		↳ Special steel (higher grind speed)
105780		↳ Premium cast steel (higher grind speed & lifetime)

SPARE PARTS LIST

Version 1.1

ALBA 100 V 50/60 Hz | 110-127 V 50/60 Hz | 220-240 V 50/60 Hz

CHANGES IN THE SPARE PARTS LIST

VERS.	MATERIAL	POS.	DESCRIPTION	COMMENT
1.1	701856	18	Silicone & metal flapper	wrong picture

HEMRO

Hemro International AG

Thurgauerstrasse 80 | 8050 Zurich, Switzerland

T: +41 44 864 18 00 | **F:** +41 44 864 18 01

info@hemrogroup.com | www.hemrogroup.com